

New Part WOW Process - Metal



STEP 1: Clean and inspect panel. Use **Standex Silicone Remover 6600** and **Audurra Degreasing Cloth**.



STEP 2: If required, sand with **Audurra Premium Sanding Disc C** to remove imperfections in e-coat. If there are no imperfections or damage, go to step 3.



STEP 3: Scuff sand entire panel with **Audurra Fleece Pad very fine (red)***.




STEP 4: Clean panel thoroughly. Use **Standex Silicone Remover 6600** and **Audurra Degreasing Cloth**.



STEP 5: Apply **Standex VOC Nonstop Primer Surfacer U7580**. Flash off.



STEP 6: If needed, remove dust inclusions by using **Audurra Sanding Sponge Flex Ultrafine Blue**.

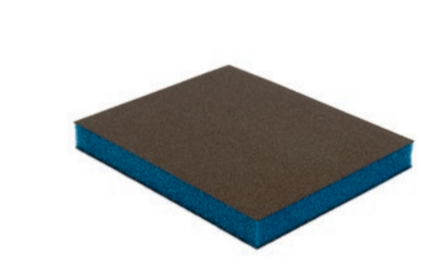

*Due to the wide variety of electrocoats present on the market, its quality can differ a lot. For this reason preferably scuff sand the e-coat. Follow relevant Standex product TDS's

Some products in this chart may not be available in Australia & New Zealand however alternatives can be supplied.

This New Part WOW Process for Metal has been performed with products from the Standex product range.

